






INSTRUCTIONS FOR REMOVING THE ALFA 31XHT OVEN FROM THE CABINET



DISCONNECT THE CABINET FROM THE ELECTRICAL MAINS


UNDO THE TWO SCREWS AS SHOWN BELOW

VIEW FROM
BELOW

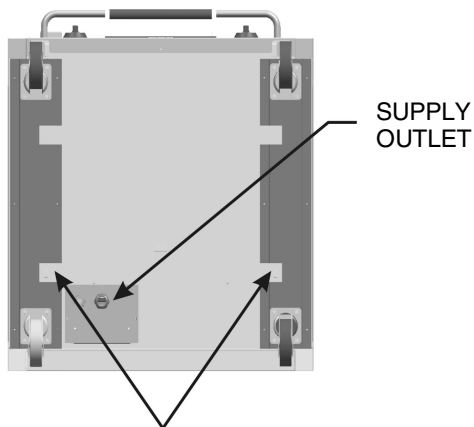

TO REMOVE THE OVEN FROM
THE CABINET, UNDO THE TWO
M8 BOLTS IDENTIFIED BY THE
ARROWS

FRONT
VIEW

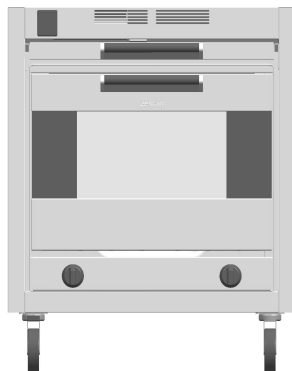





Instruction for the user

GB-IE

EXTRACT THE PULL-OUT WORKTOP RIGHT OUT AND REMOVE IT FROM THE CABINET, APPLYING LEVERAGE TO THE TWO RAPID RELEASE DEVICES ON THE RUNNERS. ("A" AND "B").

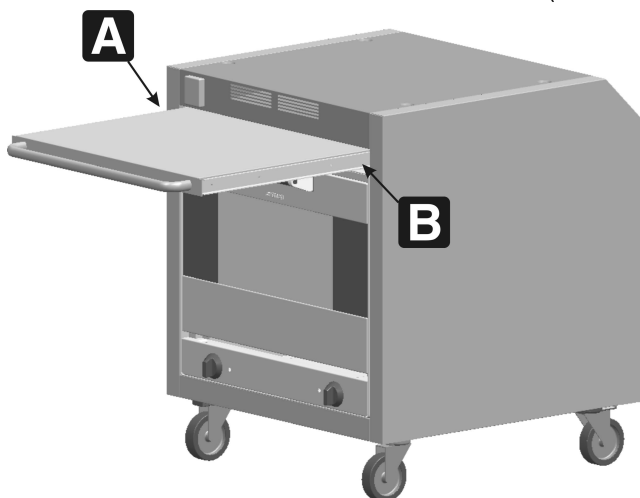


REMOVE THE OVEN, TAKING CARE NOT TO DAMAGE THE INTERNAL WIRING
(IF THE OVEN IS PULLED TOO FAR OUT AT THIS STAGE, THE VARIOUS CABINET COMPONENTS DIRECTLY CONNECTED TO THE OVEN MAY NOT BE CORRECTLY DISCONNECTED).

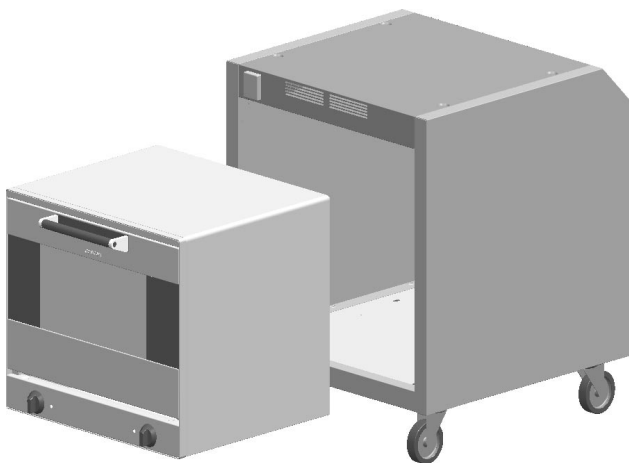


Instructions for the User



DISCONNECT THE TWO WIRES FROM THE TANGENTIAL COOLING FAN IN THE TOP OF THE CABINET.

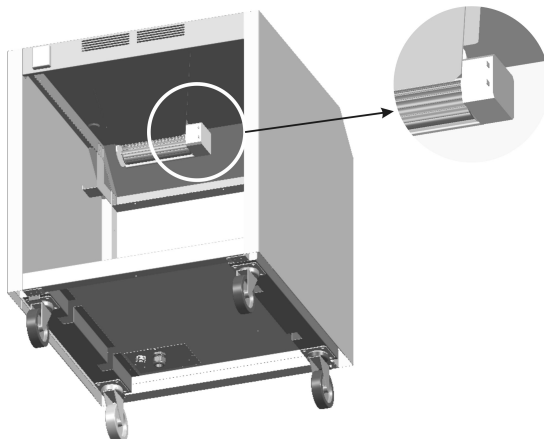



DISCONNECT THE OVEN POWER SUPPLY CABLE FROM THE CABINET TERMINAL BOARD.

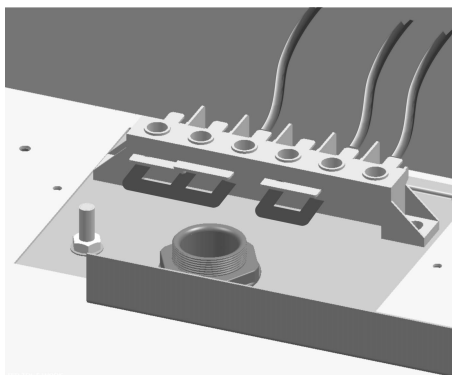

 MAKE SURE THAT THERE ARE NO MORE CABLES DIRECTLY CONNECTED TO THE OVEN AND THEN SCREW ITS FEET (SUPPLIED WITH IT) INTO PLACE.



TO TURN ON THE TANGENTIAL COOLING FAN WITH THE OVEN OFF, TURN THE TIMER TO THE  SYMBOL AND THE OVEN THERMOSTAT TO THE  SYMBOL.